


Installation Steps


Step A:

Begin by preparing the wall surface using Plyboard, gypsum, or MDF to create a zero-level surface. Ensure that the surface is clean and free of any dust, dirt, or debris.

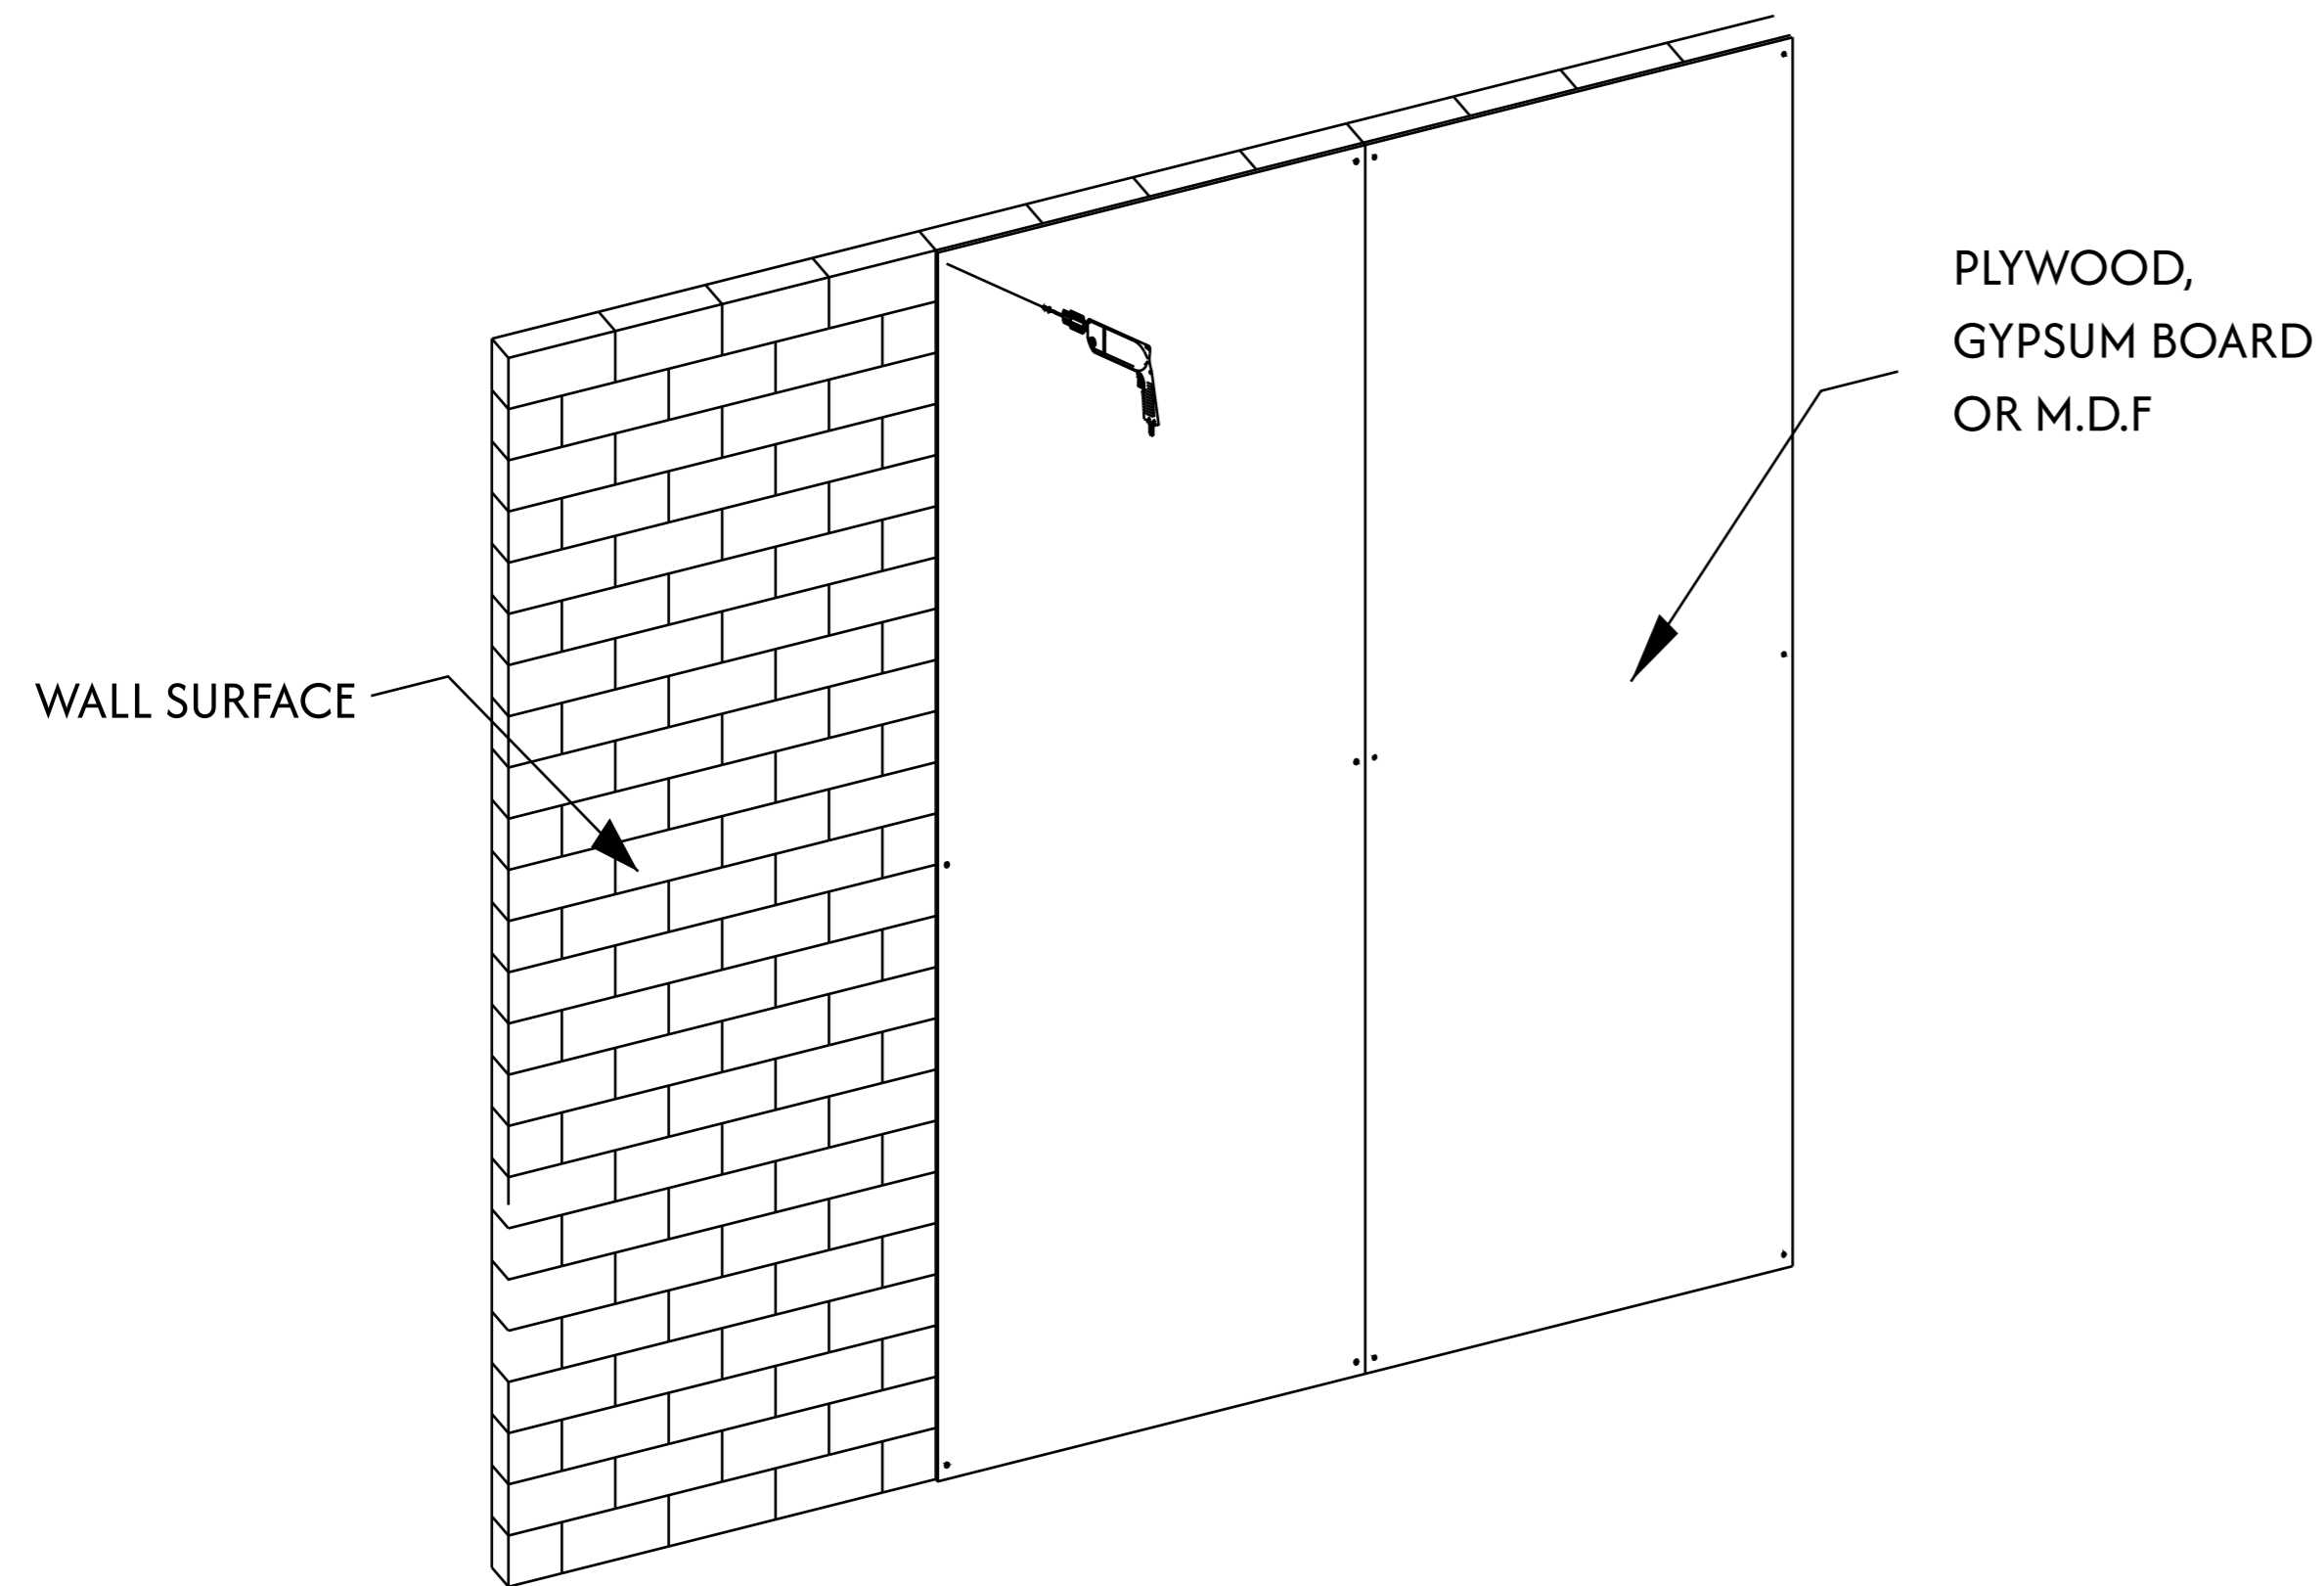


Step B:

Apply adhesive to both the wall surface and the back of the Cara. Use the recommended adhesive and apply it evenly to ensure proper adhesion.

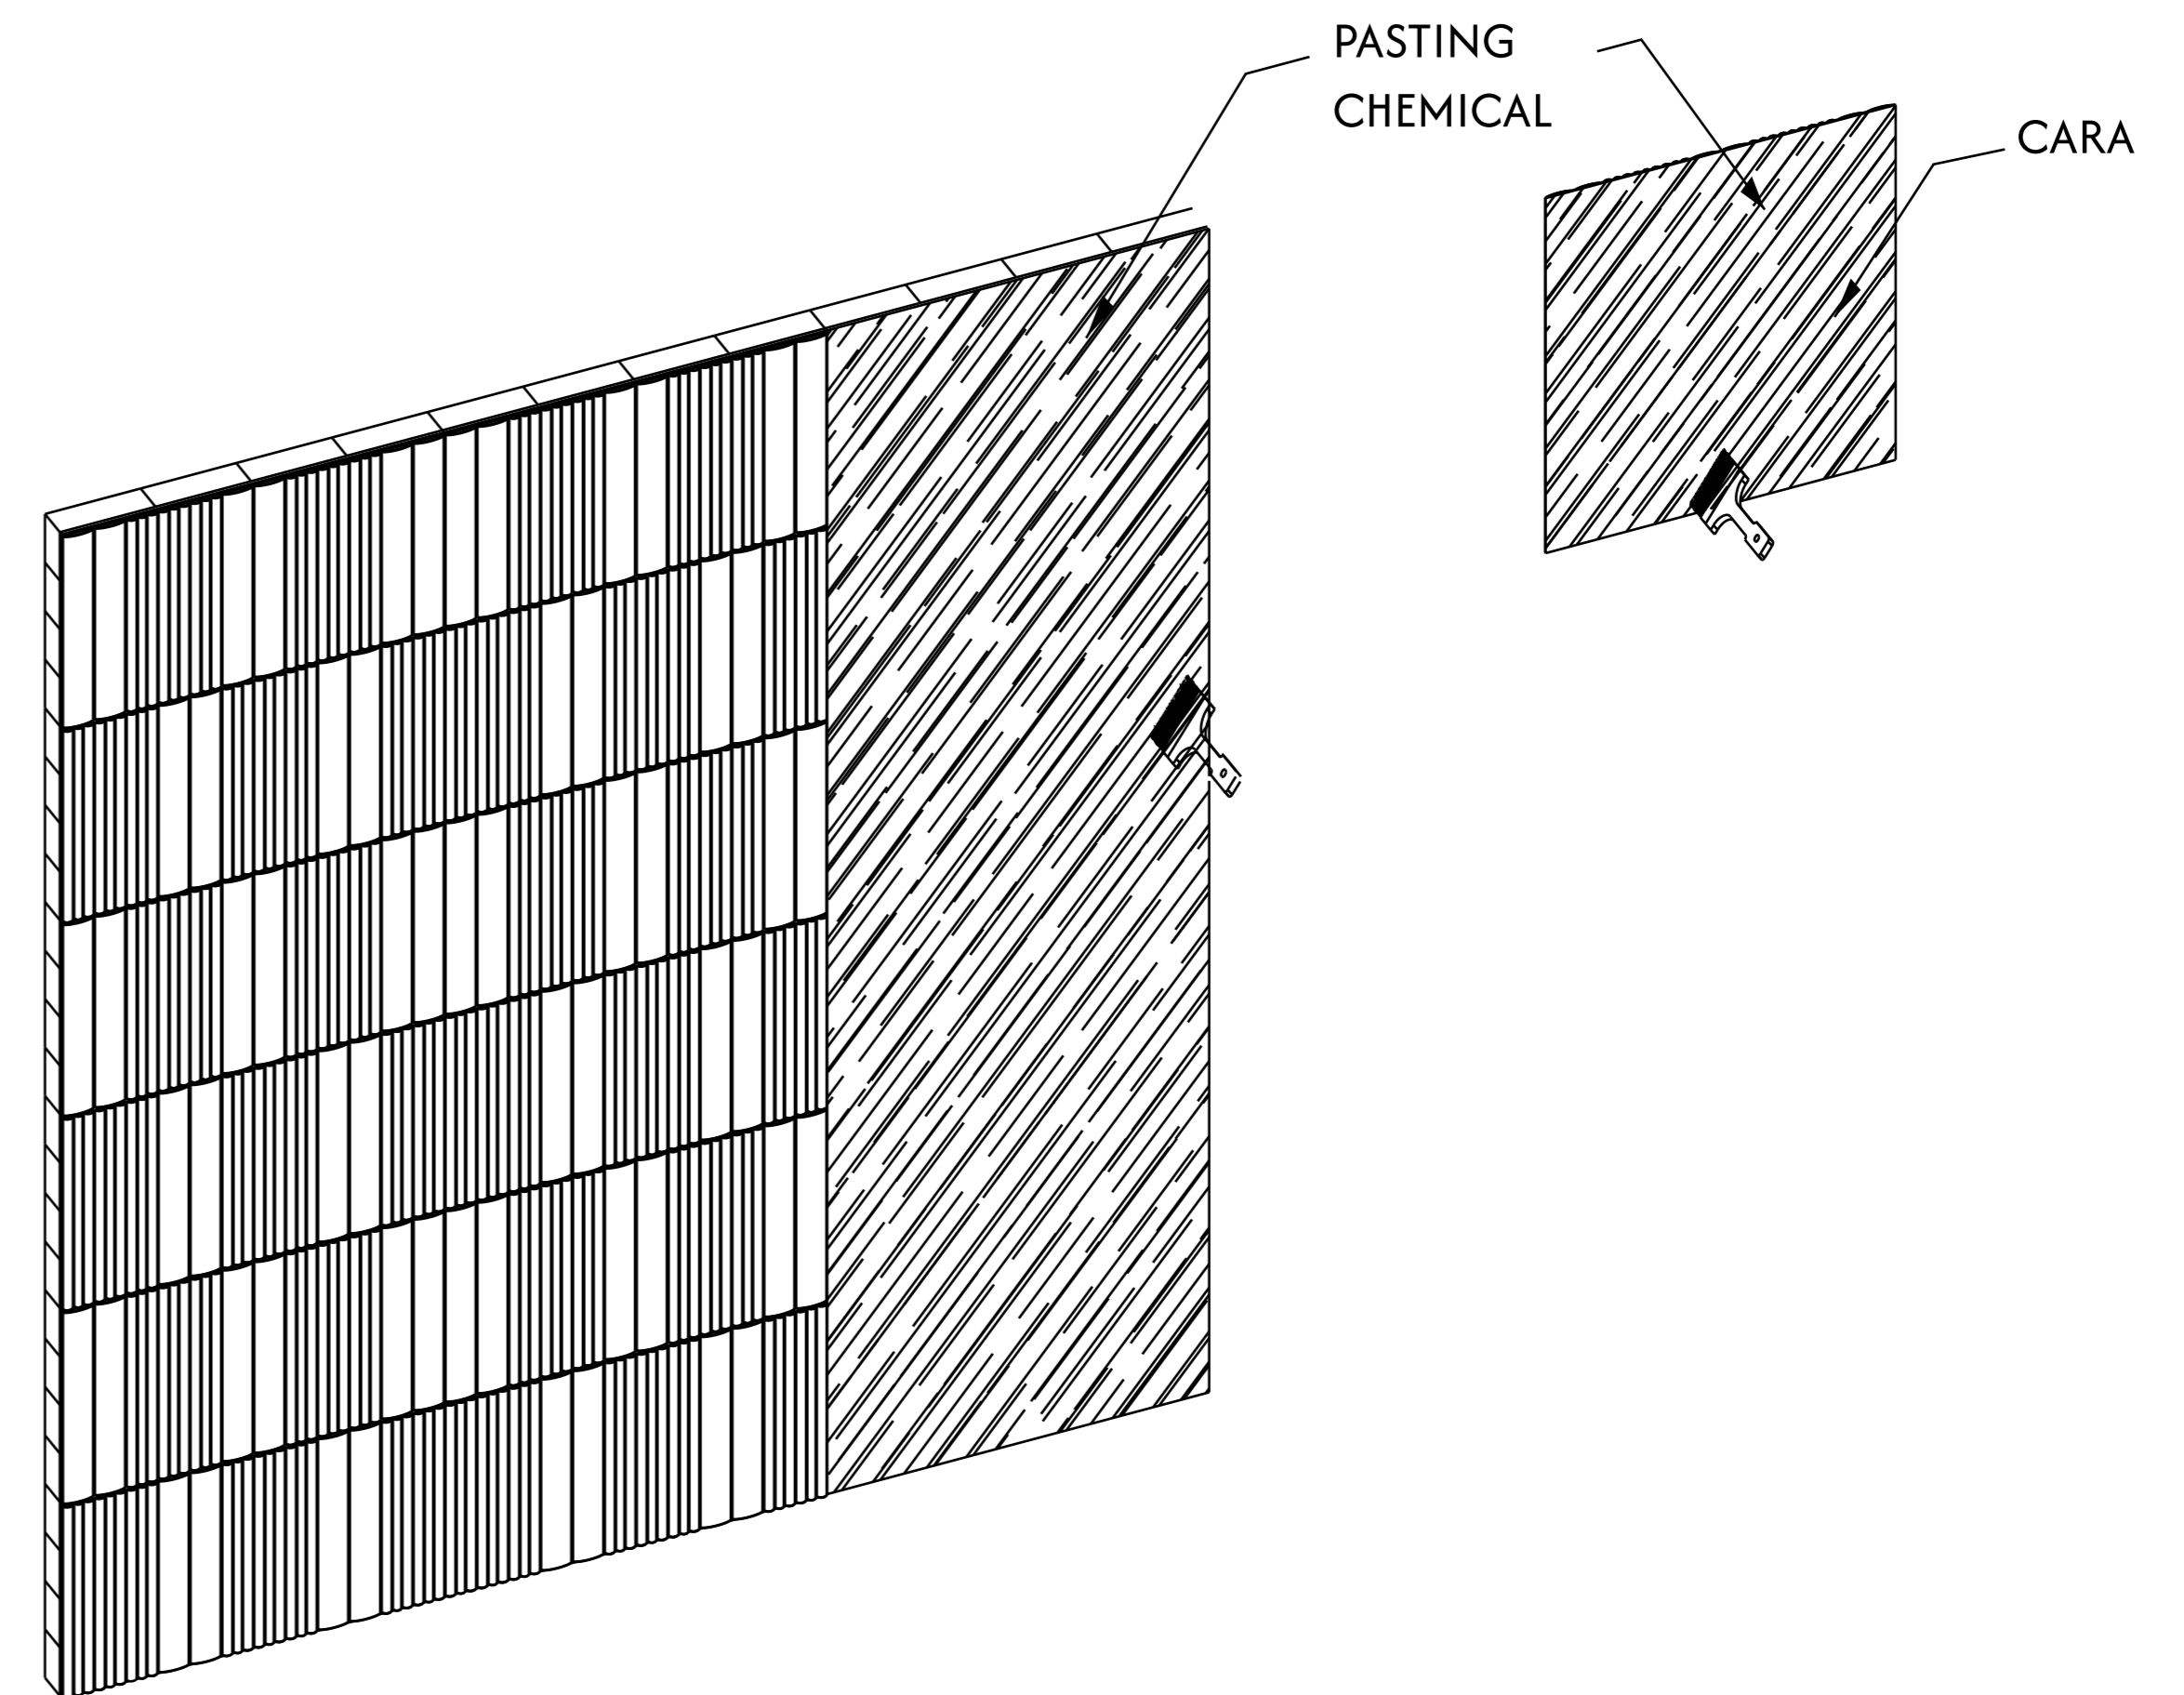

Step C:

Carefully place the Cara onto the wall surface according to the drawing details provided. Be sure to align it properly and press firmly to ensure a secure bond.

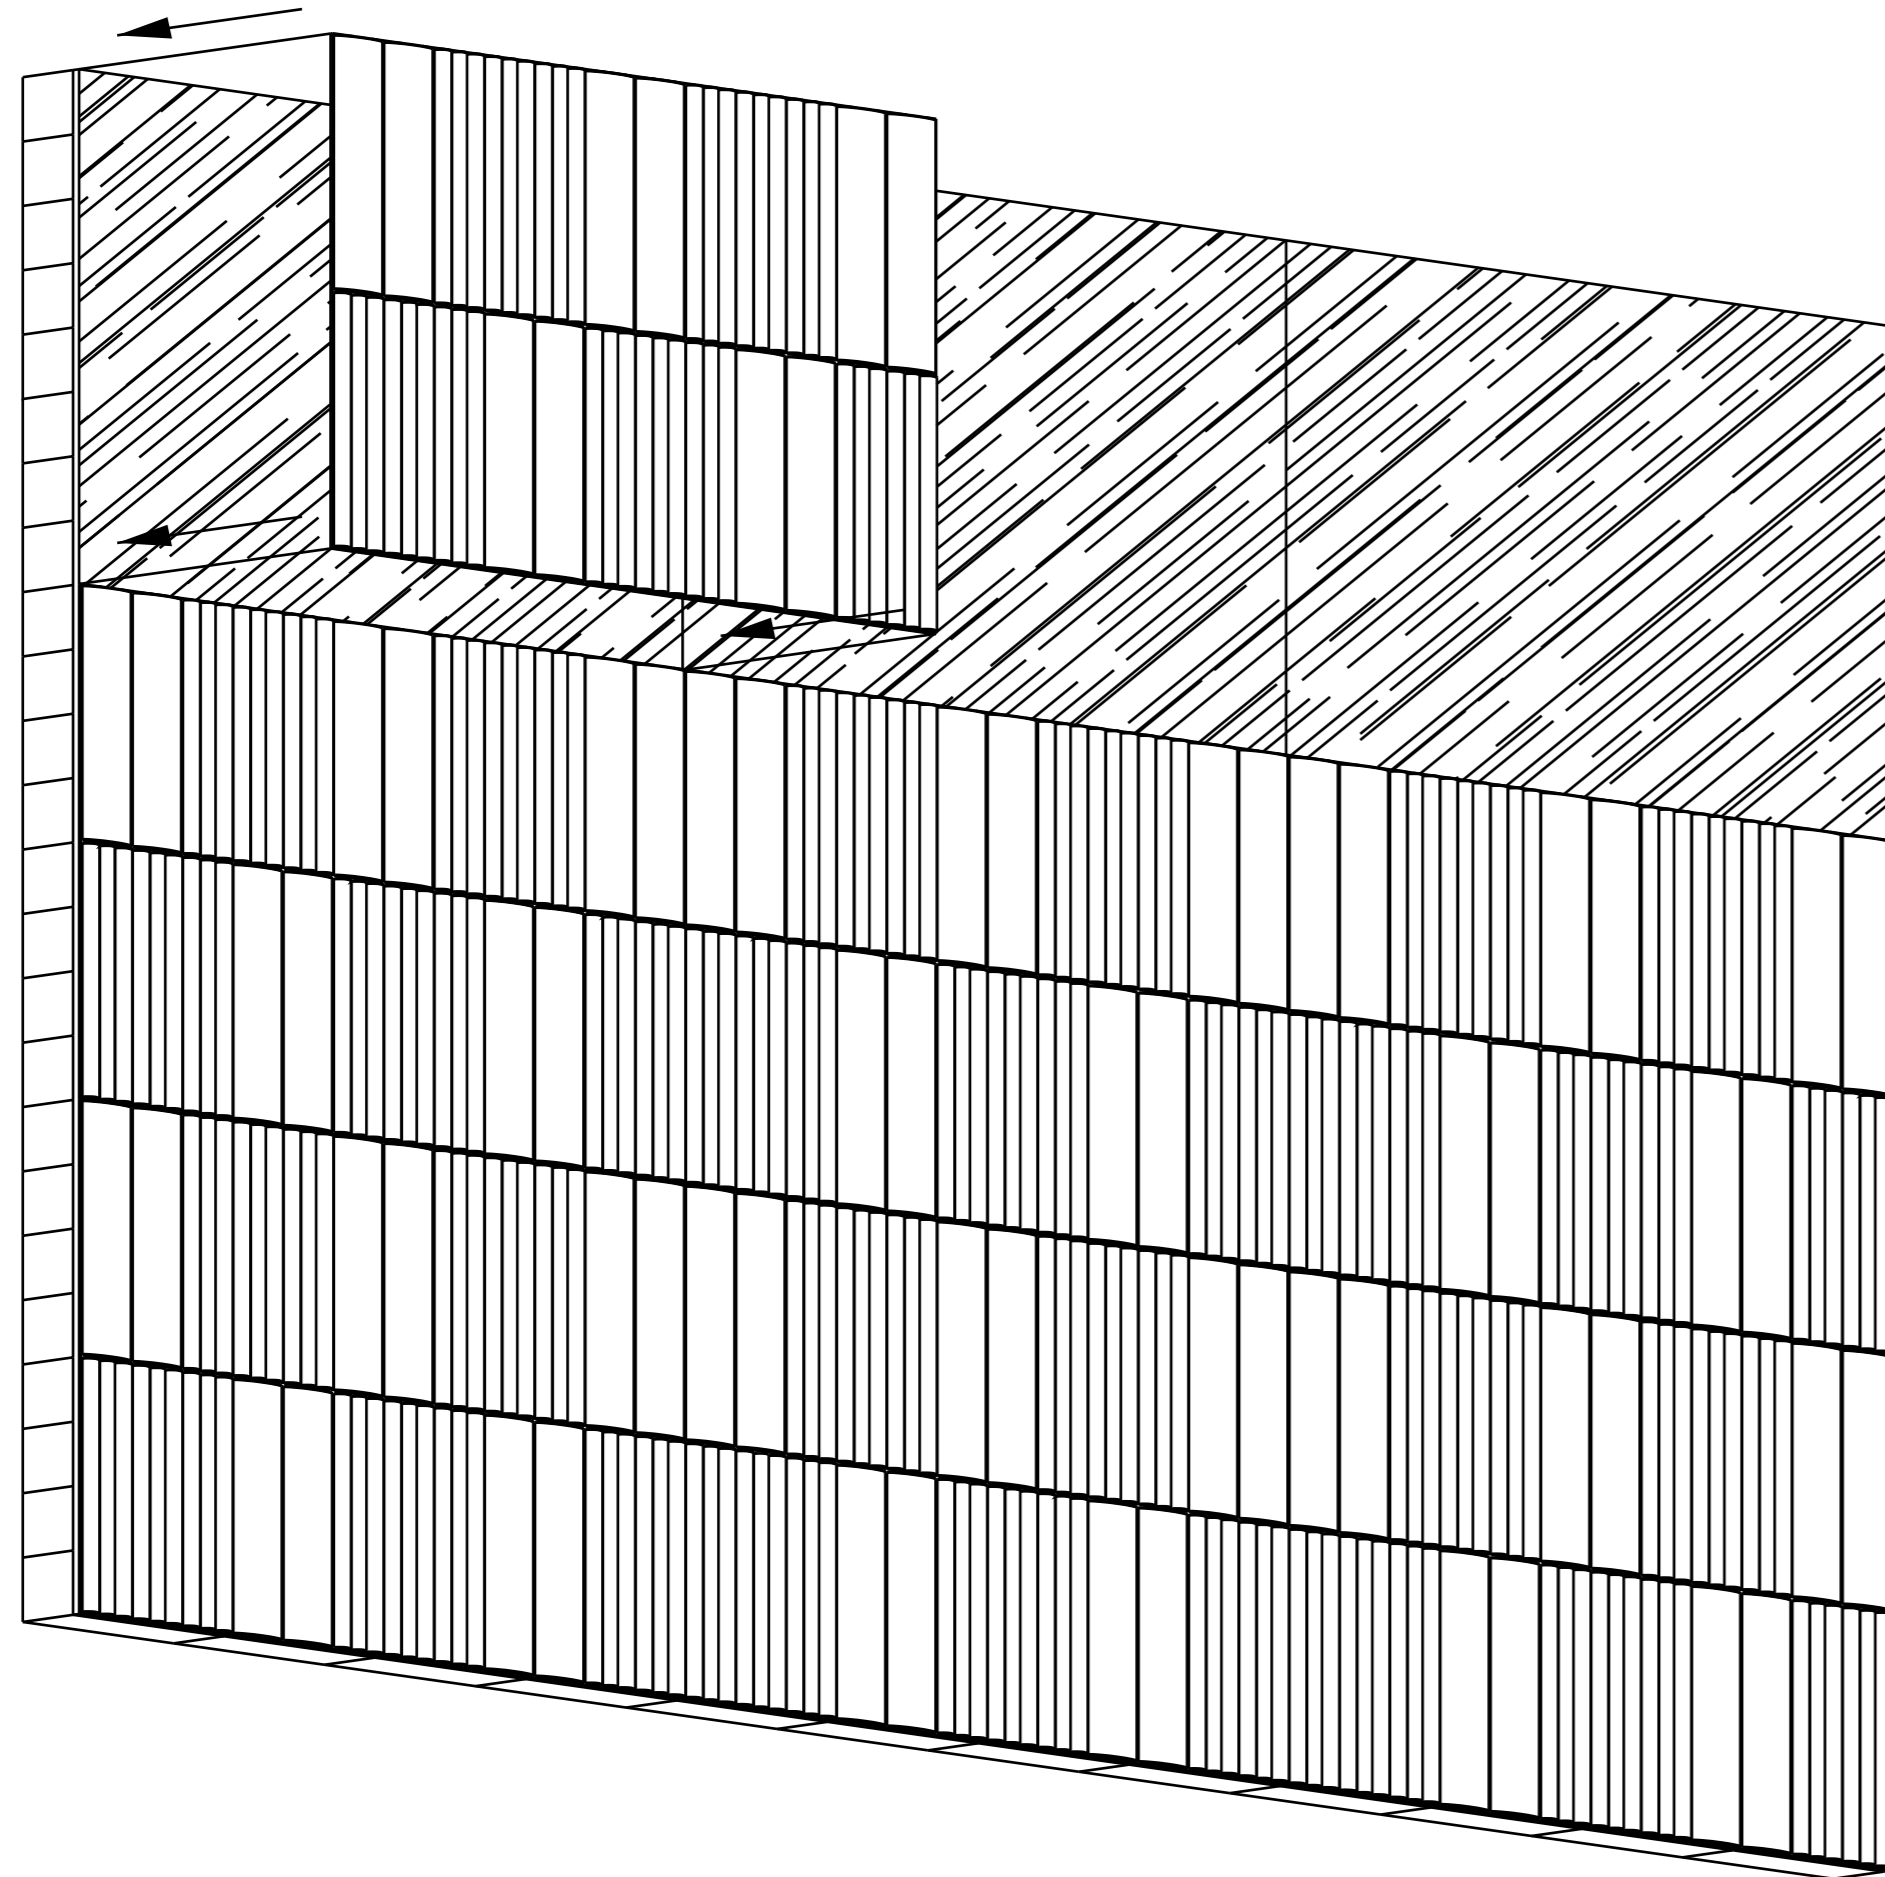

 info@sensesakustik.com

 www.sensesakustik.com